

## **Eventioneers Event Rental and Supplies**

11171 Perry Highway  
Wexford, PA 15090

### **Includes:**

Machine/cart  
Floss bowl  
Clear bubble guard  
Whirl grip with 4 clips

### **Options:**

Floss sugar carton ½ gallon  
Cotton candy cones  
Cotton candy bags

# **Cotton Candy Machine**

- 1. Make sure motor is positioned in the center of the cart and switches are facing the opening**
- 2. Plug the machine into a standard electrical outlet**
- 3. Fill center of machine with approximately 1 cup or less of sugar**
- 4. Moisten Whirl Grip (mesh screen) with a damp sponge. This process allows the floss to adhere to the side of the floss bowl**
- 5. Turn the motors switch “ON” and turn the heat switch the MEDIUM**

**6. Dampen cone slightly and twirl cone approximately 1 inch away from Whirl Grip**

**Do Not stop twirling until machine is turned off**

**WARNING: DO NOT PUT HAND CLOSE TO THE CENTER OF THE MACHINE WHILE OPERATING**

**7. Work floss away from the center of machine. You may make several servings, approximately up to 10 at a time but will need to stop to allow the machine to cool to prevent the sugar from burning**

**8. Once you have made the servings, you MUST TURN OFF THE HEAT SWITCH FIRST. This step is crucial to prevent sugar from clogging and burning**

**9. Allow machine to cool for a few minutes**

**10. When you are ready to make more servings, repeat steps 5-9**

**11. When finished, TURN OFF HEAT SWITCH FIRST**

**12. When cool, turn OFF the motor switch**

***Cleaning:***

**Please do not attempt to clean this machine as problems may occur.**

### ***Cotton Candy Supplies***

<b>SERVINGS:</b>		<b>500</b>	<b>1000</b>	<b>2000</b>
<b>Floss Mix</b>	<b>½ gallon</b>	<b>10</b>	<b>20</b>	<b>40</b>
<b>Floss Cones</b>	<b>100 pack</b>	<b>5</b>	<b>10</b>	<b>20</b>
<b>Plastic Bags</b>	<b>100 pack</b>	<b>5</b>	<b>10</b>	<b>20</b>